




**B**


## MAIN (AUDIO-OUT1) CIRCUIT

— : +B SIGNAL LINE     : DVD AUDIO SIGNAL LINE  
 - - - : -B SIGNAL LINE     : DVD VIDEO SIGNAL LINE     : MAIN SIGNAL LINE

TO  
DVD  
MODULE  
(IN/OUT)  
CIRCUIT  
(FP8101) ON  
SCHEMATIC  
DIAGRAM-4

**A**

PS4001

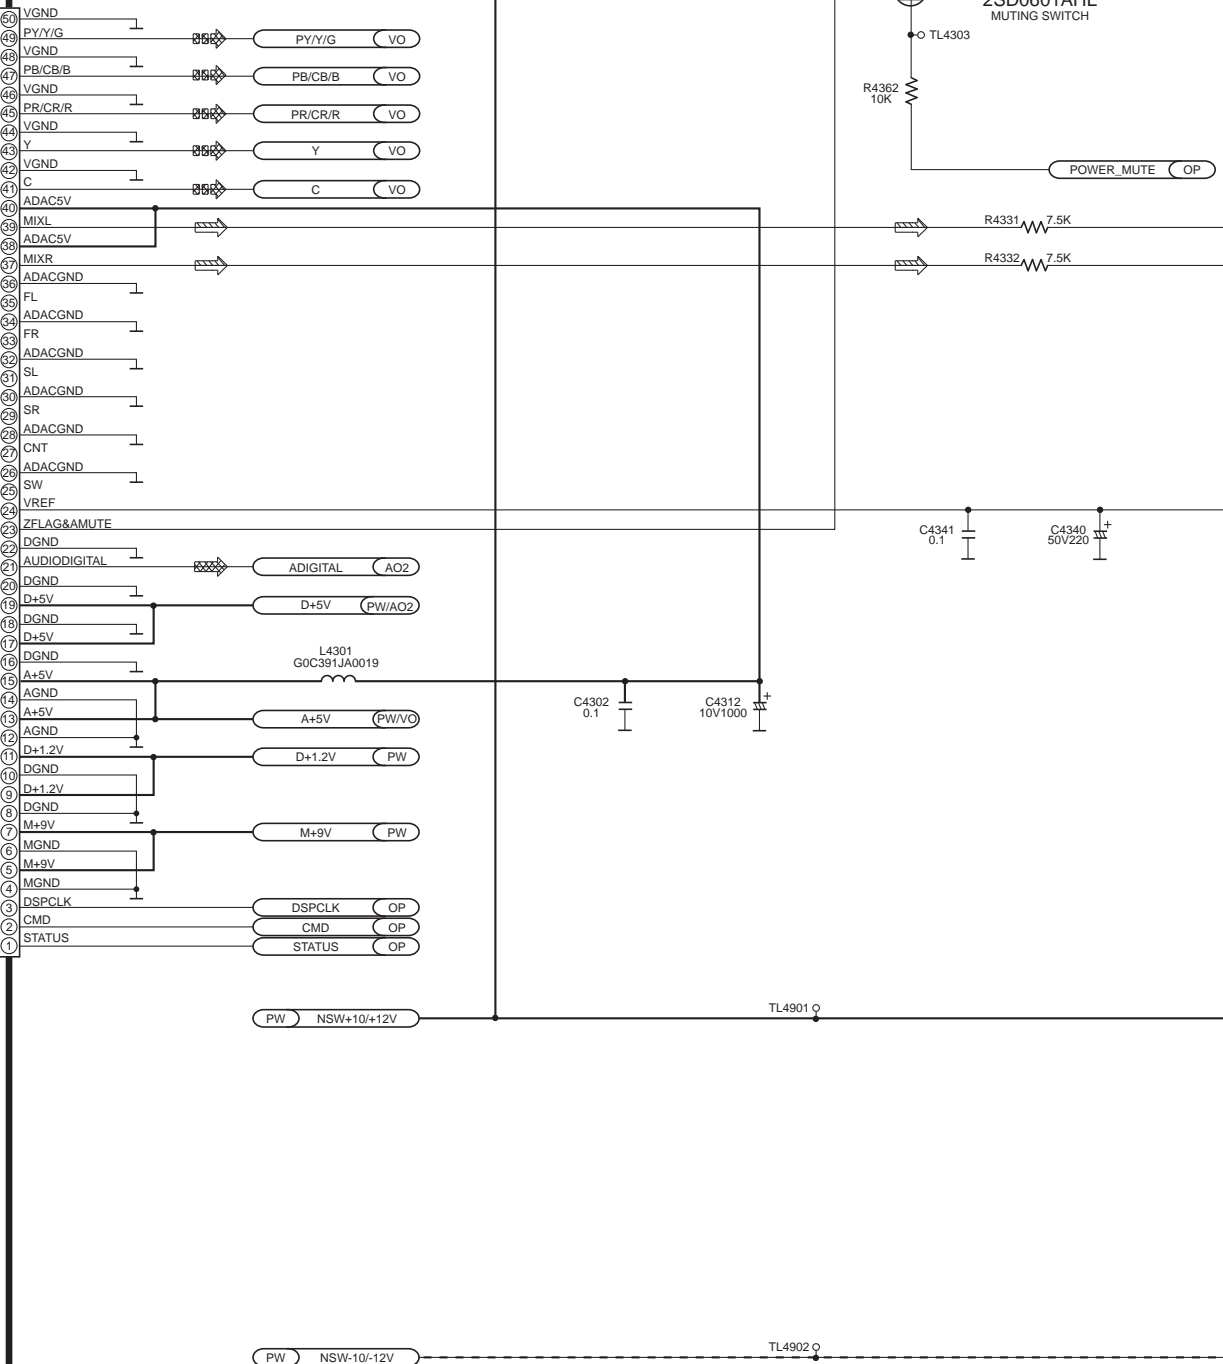

**B**

## MAIN (AUDIO-OUT1) CIRCUIT

— : +B SIGNAL LINE

- - - : -B SIGNAL LINE

⇒ : MAIN SIGNAL LINE

